


KIWI-30 v100 Menu Structure

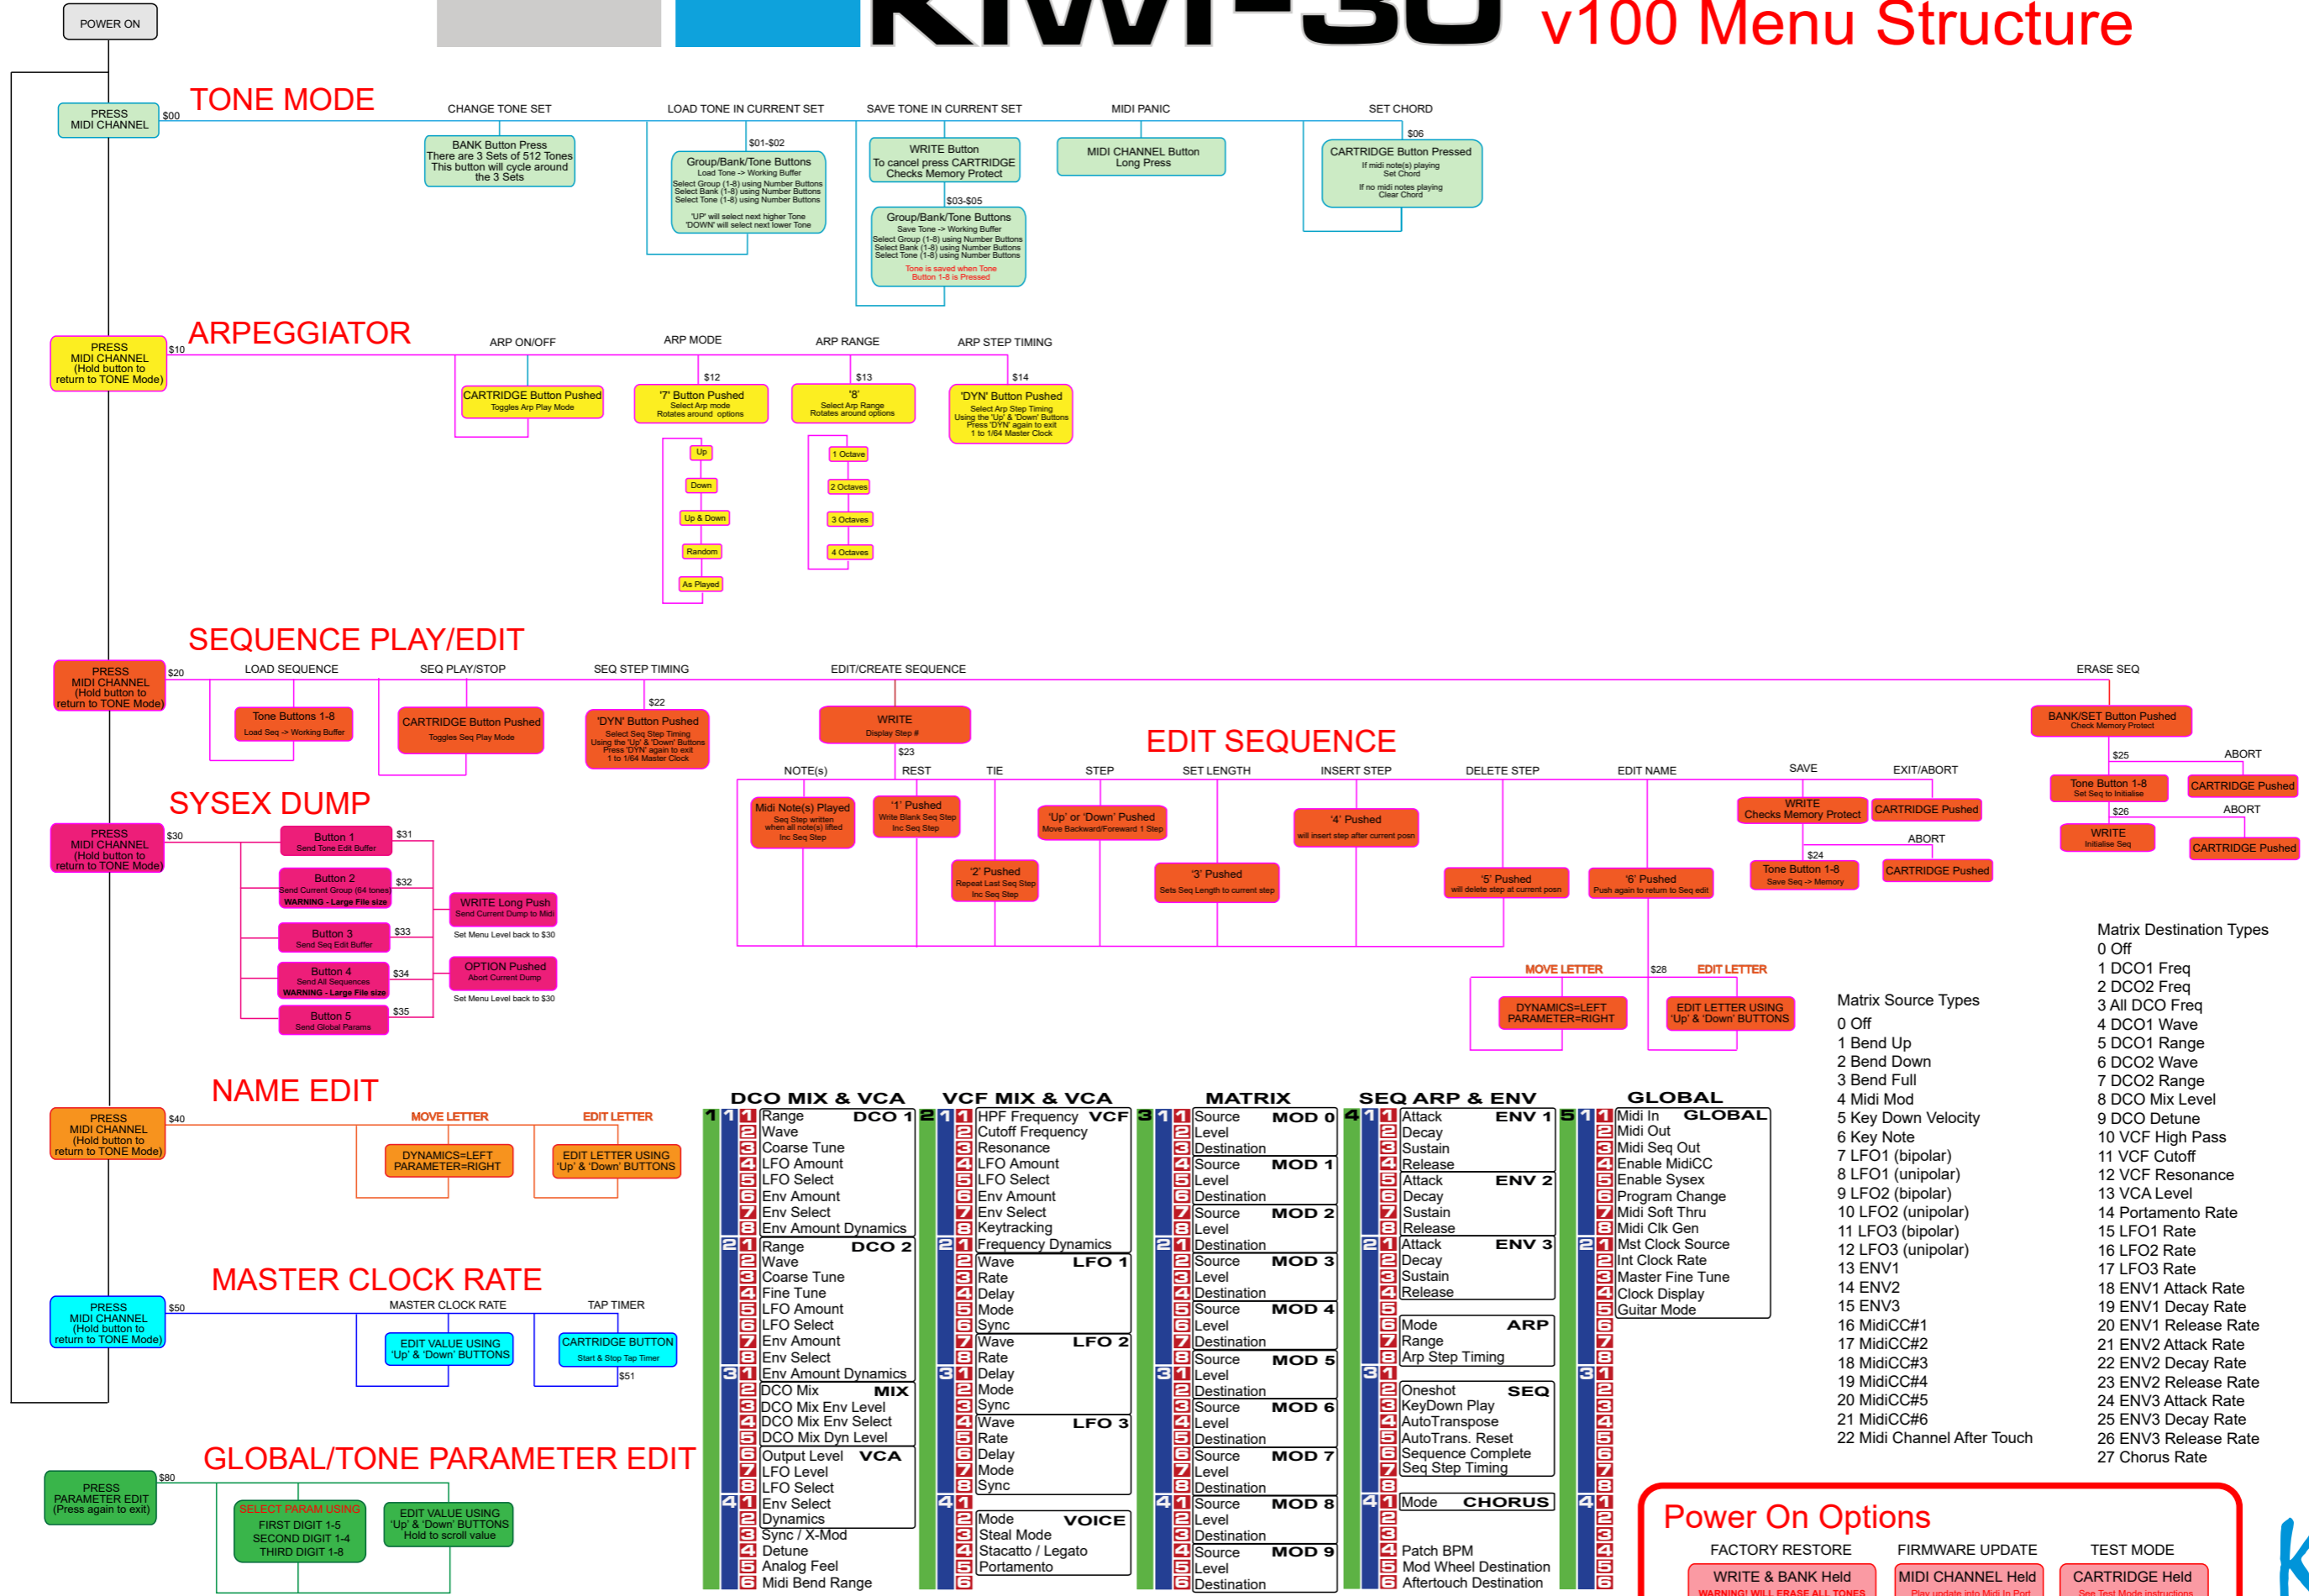

- Matrix Destination Types**
- 0 Off
 - 1 DCO1 Freq
 - 2 DCO2 Freq
 - 3 All DCO Freq
 - 4 DCO1 Wave
 - 5 DCO1 Range
 - 6 DCO2 Wave
 - 7 DCO2 Range
 - 8 DCO Mix Level
 - 9 DCO Detune
 - 10 VCF High Pass
 - 11 VCF Cutoff
 - 12 VCF Resonance
 - 13 VCA Level
 - 14 Portamento Rate
 - 15 LFO1 Rate
 - 16 LFO2 Rate
 - 17 LFO3 Rate
 - 18 ENV1 Attack Rate
 - 19 ENV1 Decay Rate
 - 20 ENV1 Release Rate
 - 21 ENV2 Attack Rate
 - 22 ENV2 Decay Rate
 - 23 ENV2 Release Rate
 - 24 ENV3 Attack Rate
 - 25 ENV3 Decay Rate
 - 26 ENV3 Release Rate
 - 27 Chorus Rate
- Matrix Source Types**
- 0 Off
 - 1 Bend Up
 - 2 Bend Down
 - 3 Key Down Velocity
 - 4 Key Note
 - 5 DCO1 Range
 - 6 DCO2 Range
 - 7 DCO1 Wave
 - 8 DCO2 Wave
 - 9 DCO1 Freq
 - 10 DCO2 Freq
 - 11 LFO1 (bipolar)
 - 12 LFO2 (bipolar)
 - 13 LFO3 (bipolar)
 - 14 LFO1 (unipolar)
 - 15 LFO2 (unipolar)
 - 16 LFO3 (unipolar)
 - 17 ENV1
 - 18 ENV2
 - 19 ENV3
 - 20 MidiCC#1
 - 21 MidiCC#2
 - 22 MidiCC#3
 - 23 MidiCC#4
 - 24 MidiCC#5
 - 25 MidiCC#6
 - 26 Midi Channel After Touch

Power On Options

<p style="font-size: 8px; margin: 0;">FACTORY RESTORE</p> <p style="font-size: 10px; margin: 0; font-weight: bold;">WRITE & BANK Held</p> <p style="font-size: 8px; margin: 0;">WARNING! WILL ERASE ALL TONES AND SEQUENCES AND RESET ALL GLOBAL PARAMETERS</p>	<p style="font-size: 8px; margin: 0;">FIRMWARE UPDATE</p> <p style="font-size: 10px; margin: 0; font-weight: bold;">MIDI CHANNEL Held</p> <p style="font-size: 8px; margin: 0;">Play update into Midi In Port</p>	<p style="font-size: 8px; margin: 0;">TEST MODE</p> <p style="font-size: 10px; margin: 0; font-weight: bold;">CARTRIDGE Held</p> <p style="font-size: 8px; margin: 0;">See Test Mode instructions in Manual</p>
---	---	---

