

Update Notes for Kiwi-30 v Prog 1.3 & Boot 1.1a

This update needs files to be run in the correct order.

Take note of the current release at normal power on. It will display for 1 second when the synth is powered on.

Files can be played into the Kiwi-30 using MidiOX or similar.

- 1) While pressing the MIDI CHANNEL (MENU) button switch on the power.
- 2) Play in the file K30_Boot_v110_Build9.SYX and wait until the display shows 'UPDATE SUCCESSFUL'
- 3) While pressing the MIDI CHANNEL button cycle the power
- 4) Play in the file K30_Prog_v130_Build3.SYX
- 5) Once the display shows 'UPDATE SUCCESSFUL' cycle the Power

Included with the update is the Kiwi30 factory tone (v2) set for Sets 1-3 (1536 tone in total). To load this send the group files to the Kiwi-30 using Midi-OX or similar.