

## Update Notes for Kiwi-30 v Prog 2.0 & Boot 1.1a

Backup tones before running this update.

This is a major update and must not be run if the Kiwi Wave Board is not fitted. The Kiwi30 will not sound right and the tones will be corrupted.

This update needs files to be run in the correct order.

Take note of the current release at normal power on. It will display for 1 second when the synth is powered on.

Files can be played into the Kiwi-30 using MidiOX or similar.

- 1) While pressing the MIDI CHANNEL (MENU) button switch on the power.
- 2) Play in the file K30\_Boot\_v110\_Build10.SYX and wait until the display shows 'UPDATE SUCCESSFUL'
- 3) While pressing the MIDI CHANNEL button cycle the power
- 4) Play in the file K30\_Prog\_v200\_Build10.SYX
- 5) Once the display shows 'UPDATE SUCCESSFUL' cycle the Power

Included with the update is the Kiwi30 factory tone (v2) set for Sets 1-3 (1536 tones in total). To load this send the group files to the Kiwi-30 while it is play mode using Midi-OX or similar. This collection of tones comes from several sources and has not been thoroughly checked. There are duplicates and copies may not sound the same due to the different sources.

**Loading this file will overwrite all the tones in memory so backup anything you wish to keep before this is loaded.**

Note – the tone bank has been imported from various sources and not all the tones have been checked. Some may not sound or be useful.