

Kiwitechnics 3P V230 Update Notes

This is the Bv200 Pv230 Upgrade.

Instructions are

1) Back up tones if on v2+.

2) If updating from v1.5.3+ put 3P into update mode by pressing and holding the TAPE button while powering the 3P on.

Play in the file 3P_Boot_v100_Upgrade.SYX into the 3P and wait for the Bank D light to come on..

3) While pressing and holding the TAPE button power on the 3P (or cycle the power if you have done step one).

Play in the file 3P_Boot_v200.SYX into the 3P and wait for the Bank D light to come on.

4) Cycle the power while pressing and holding the TAPE button.

Play in the file 3P_Prog_v230.SYX into the 3P and wait for the Bank D light to come on. This is a large file and will take a little while.

5) If you have done step 1 you will also need to initialize the memory. This is done by holding down both the EDIT WRITE and SEQ WRITE buttons as you power on. This is not required if the 3P was already on version 2xx.

6) If you began this upgrade on a v2+ release and no sound is heard after the upgrade is finished then check the internal velocity level. (Global Parameter A:4)
The memory position for this parameter has changed and may need to be reset.

7) The key transpose system has been changed to be + or - two octaves. Because of this the 3P will default to -2 octaves after the update and will need to be reset. Set the Key Transpose to middle C by pressing and holding the Key Transpose button and then playing middle C.

Program changes are detailed on the Releases Page of the Kiwitechnics web site.