

Kiwitechnics 3P V250 Update Notes

This is the Bv300 Pv250 Upgrade.

WARNING – Applying this update will remove support for the PG-200. If you wish to use the PG-200 do not apply this update.

Instructions are

- 1) Back up tones
- 2) Cycle the power while pressing and holding the TAPE button.
- 3) Play in the file 3P_Boot_v300.SYX into the 3P and wait for the Bank D light to come on.
- 4) Cycle the power while pressing and holding the TAPE button.
- 5) Play in the file 3P_Prog_v250.SYX into the 3P and wait for the Bank D light to come on. This is a large file and will take a little while.

Program changes are detailed on the Releases Page of the Kiwitechnics web site.