

Update Notes for KiwiSix v Prog 3.00 & Boot 3.00

Notes for this update

- 1) Any tones saved in positions 513-1023 will be lost. Move these to the lower 512 tones before updating
- 2) Make sure the TAPE switch is in the normal play position (Tape light off)
- 3) Make sure the ARP LATCH switch is in the off position

This update needs files to be run in the correct order.

Take note of the current release at normal power on. It will display on the tone lights 1-8. Light 1-6 are the program release and lights 7-8 are the bootloader release.

- 1) While pressing the Load Bank B button switch on the power (this button is labeled Transmit BFJN with the synthgraphics overlay)
- 2) Play in the file K6_Boot_v300.SYX
- 3) While pressing the Load Bank B button cycle the power after the Bank D Light goes on
- 4) Play in the file K6_Prog_v300.SYX
- 5) Once the Bank D light comes on cycle the Power

The release lights will show Tone 3 (Prog v300) and Tone 7&8 (Boot v300)

This update has extensive changes and details can be found on the [Kiwitechnics Releases page](#).