

Update Notes for KiwiSix v Prog 5.00 & Boot 3.01

Notes for this update

- 1) Make sure the TAPE switch is in the normal play position (Tape light off)

This update needs files to be run in the correct order.

Take note of the current release at normal power on. It will display on the tone lights 1-8. Light 1-6 are the program release and lights 7-8 are the bootloader release.

- 1) While pressing the Load Bank B button switch on the power (this button is labeled Transmit BFJN with the synthgraphics overlay)
- 2) Play in the file K6_Boot_v301_build8.SYX
- 3) While pressing the Load Bank B button cycle the power after the Bank D Light goes on
- 4) Play in the file K6_Prog_v500_Build1.SYX
- 5) Once the Bank D light comes on cycle the Power

The release lights will show Tone 5 (Prog v5.0) and Tone 7&8 (Boot v3.1)

This update changes and details can be found on the [Kiwitechnics Releases](#) page.